



INSTALLATION GUIDE


Maxiflex 32DI Modules
M1326A

Installation

Please read this Installation Guide **first** before installing this unit. For programming details of this product, refer to Technical Note TN1002.

This module may be installed in any I/O Slot of the Maxiflex Rack. It may also be installed and removed while the system is live. **DO NOT** install this unit into the CPU slot or the PSU slot. Such action may cause permanent hardware failure.


For access to individual terminals, a range of ribbon-to-terminal adapters is available from Omniflex. Consult your distributor for details.

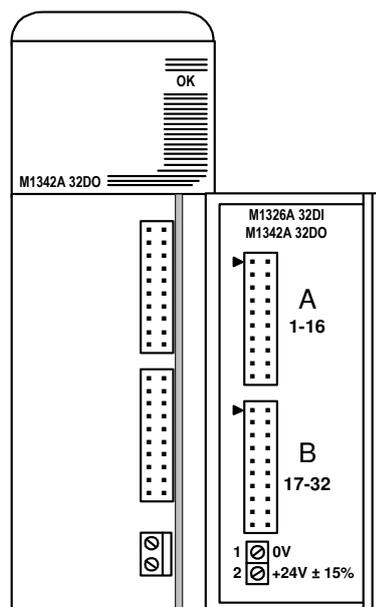

Specifications

Number of Inputs	32
Termination	2 x 20 way ribbon headers
Type	Switch to common 0V
External Supply Voltage	18 – 28 Vdc
Current Consumption	25 mA Max. excl. loads
Max Rated Current	200mA all inputs
Maximum voltage for a “1”	2 V
Maximum current for a “0”	8 V
Input current	8.5 mA at 28 Vdc supply
Weight without packaging	232g

Electrical Connections

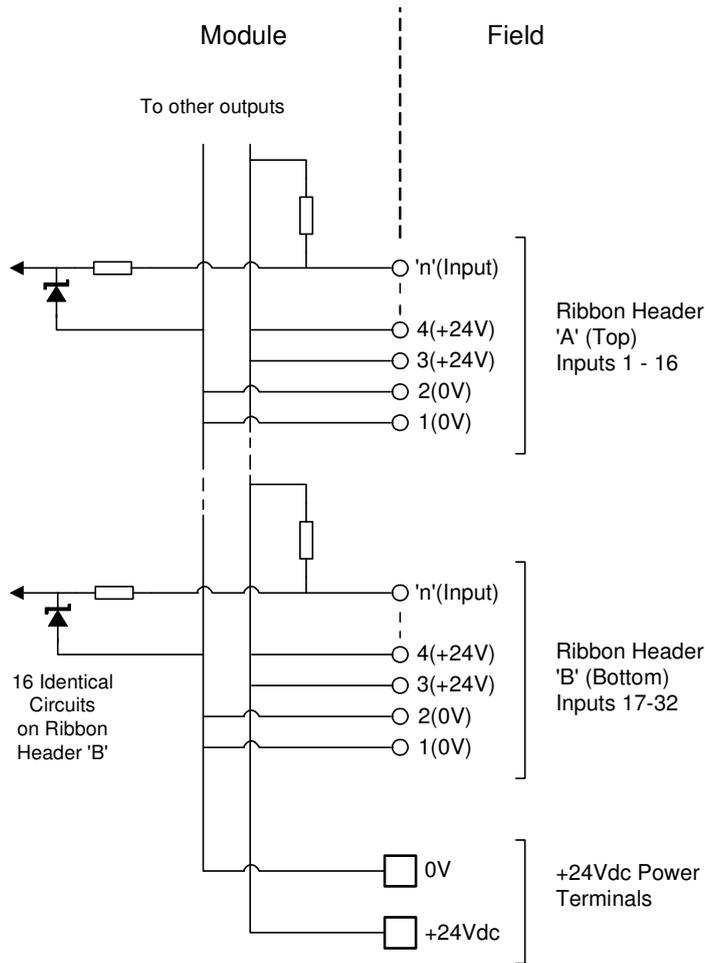

Ribbon Header Pinouts

Ribbon Header Pinouts

